



ORIGINAL	SUPERIOR
	POWER
	MUTE
SRND	MENU
	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
	-/--
MENU SYS	
MENU VID	
MENU AUD	
MENU SRC	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	TV/DTV
	INFO
	FAV

ORIGINAL	SUPERIOR
STOP	/ SMART
	RED
REW	GREEN
FWD	BLUE
TUNER	SHIFT+1
DISC	SHIFT+2
AUX	SHIFT+3
TV/STB	SHIFT+4
TAPE	SHIFT+5
VCR	SHIFT+6
F1/F2 / / 	SHIFT+
F3/F4 / 	SHIFT+
F5/F6 / / T/C	SHIFT+
F7/F8 / PAUSE	SHIFT+
RED / 	SHIFT+RED
GREEN / 	SHIFT+GREEN
YELLOW / I/II	SHIFT+YELLOW
BLUE / 	SHIFT+BLUE

COMPATIBLE DEVICES

FREEDOM

SUPERIOR 4:1

SUPERIOR 2:1

SUPERIOR 1:1

Simply

Hotel TV

Simply Digital TV



VISIT OUR WEBSITE TO DISCOVER