



ORIGINAL	SUPERIOR
ON	POWER
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
S/C	-/--
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
SURROUND	SLEEP
AMP	TV/DTV
PROG	EPG
SRC	FAV
PAUSE	⏸
STOP	⏹ / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
CD	SHIFT+1
TUNER	SHIFT+2
CC	SHIFT+3
TAPE	SHIFT+4

ORIGINAL	SUPERIOR
AUX/P	SHIFT+5
AUX	SHIFT+6
SP A	SHIFT+LEFT
SP B	SHIFT+RIGHT

COMPATIBLE DEVICES

FREEDOM

SUPERIOR 4:1

SUPERIOR 2:1

SUPERIOR 1:1

Simply+

Hotel TV

Simply Digital TV



VISIT OUR WEBSITE TO DISCOVER