



ORIGINAL	SUPERIOR
	<b>POWER</b>
<b>M</b>	<b>MENU</b>
/ OFF	<b>EXIT</b>
<b>1/2/3/4/5</b>	<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>	<b>6/7/8/9/0</b>
<b>AV / STORE</b>	/ <b>SOURCE</b>
<b>PRE</b>	<b>-/--</b>
<b>A</b>	
<b>LD/FLAT</b>	
<b>---</b>	
<b>B</b>	
<b>VOL+</b>	<b>VOL+</b>
<b>VOL -</b>	<b>VOL -</b>
<b>SKIP NEXT</b>	<b>P+</b>
<b>SKIP PREV</b>	<b>P -</b>
<b>UP</b>	<b>UP</b>
<b>DOWN</b>	<b>DOWN</b>
<b>LEFT</b>	<b>LEFT</b>
<b>RIGHT</b>	<b>RIGHT</b>
<b>OK</b>	<b>OK</b>
	<b>BACK</b>
<b>SRND</b>	<b>SLEEP</b>
<b>TV</b>	<b>TV/DTV</b>
<b>?</b>	<b>INFO</b>
<b>CH USER</b>	<b>EPG</b>

ORIGINAL	SUPERIOR
<b>FAV</b>	
<b>PAUSE</b>	
<b>STOP</b>	/ <b>SMART</b>
<b>PIP / REC</b>	<b>RED</b>
<b>REW</b>	<b>GREEN</b>
<b>PLAY</b>	<b>YELLOW</b>
<b>FWD</b>	<b>BLUE</b>
<b>CD/DVD</b>	<b>SHIFT+1</b>
<b>TUNER</b>	<b>SHIFT+2</b>
<b>TV/STB</b>	<b>SHIFT+3</b>
<b>TAPE</b>	<b>SHIFT+4</b>
<b>AUX</b>	<b>SHIFT+5</b>
<b>AUX 2</b>	<b>SHIFT+6</b>
<b>AUX 3</b>	<b>SHIFT+7</b>
<b>VCR</b>	<b>SHIFT+8</b>
<b>A</b>	<b>SHIFT+</b>
<b>B</b>	<b>SHIFT+</b>
<b>TV</b>	<b>SHIFT+ VOL+</b>
<b>R</b>	<b>SHIFT+ VOL -</b>
<b>SRC+</b>	<b>SHIFT+UP</b>
<b>SRC -</b>	<b>SHIFT+DOWN</b>
<b>AMP -</b>	<b>SHIFT+LEFT</b>
<b>AMP+</b>	<b>SHIFT+RIGHT</b>
<b>C / </b>	<b>SHIFT+BACK</b>
<b>M - PRG</b>	<b>SHIFT+EPG</b>

COMPATIBLE DEVICES



VISIT OUR WEBSITE TO DISCOVER