



ORIGINAL	SUPERIOR
	POWER
M	MENU
R / OFF	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / STORE	/ SOURCE
PRE	-/--
LOUDN	
FLAT	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SRND	SLEEP
TV 	TV/DTV
?	INFO
CH USER	EPG

ORIGINAL	SUPERIOR
FAV	
PAUSE	
STOP	/ SMART
PIP / REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
CD	SHIFT+1
TUNER	SHIFT+2
VIDEO	SHIFT+3
TAPE	SHIFT+4
DBR	SHIFT+5
AUX / D	SHIFT+6
AUX / A	SHIFT+7
DAT	SHIFT+8
A	SHIFT+
B	SHIFT+
	SHIFT+ VOL+
	SHIFT+ VOL -
	SHIFT+UP
	SHIFT+DOWN
	SHIFT+LEFT
	SHIFT+RIGHT
SKIP / C	SHIFT+BACK
M - PRG	SHIFT+EPG

COMPATIBLE
DEVICES

FREEDOM

SUPERIOR 4:1

SUPERIOR 2:1

SUPERIOR 1:1

Simply

Hotel TV

Simply
Digital TV



VISIT OUR
WEBSITE TO
DISCOVER