

Keys & Functions LAYOUT

Code: 4755



ORIGINAL	SUPERIOR
	POWER
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
A/B	-/--
DISP	
SRC	
AMP	
SRND	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
CD/DVD	SHIFT+1
TUNER	SHIFT+2
AUX	SHIFT+3

ORIGINAL	SUPERIOR
TV/STB	SHIFT+4
TAPE	SHIFT+5
VCR	SHIFT+6
1 / 2	SHIFT+LEFT
5 / 6 T/C	SHIFT+RIGHT
3 / 4	SHIFT+OK

COMPATIBLE
DEVICES

FREEDOM

SUPERIOR 4:1

SUPERIOR 2:1

SUPERIOR 1:1

Simply

Hotel TV

Simply
Digital TV



VISIT OUR
WEBSITE TO
DISCOVER