



ORIGINAL	SUPERIOR
ON/OFF	POWER
MUTING	MUTE
USER	MENU
SKIP/C	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
ANT A/B	-/--
WID/NAR	
MO/ST	
FLAT	
ATTEN	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
TREBLE R	UP
TREBLE L	DOWN
BASS L	LEFT
BASS R	RIGHT
STORE	OK
REPEAT	BACK
LOUDN	SLEEP
AM/FM	TV/DTV
---	INFO

ORIGINAL	SUPERIOR
PROG	EPG
PRE	FAV
---	/ NET TV
PAUSE	
STOP	/ SMART
RECORD	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
OFF	SHIFT+POWER
CD	SHIFT+1
MM	SHIFT+2
TUNER	SHIFT+4
DAT	SHIFT+5
TAPE	SHIFT+6
VIDEO	SHIFT+7
AUX	SHIFT+8
SP A	SHIFT+UP
SP B	SHIFT+DOWN
BALANCE L	SIFT+LEFT
BALANCE R	SHIFT+RIGHT
RECORD	SHIFT+RED

COMPATIBLE DEVICES



VISIT OUR WEBSITE TO DISCOVER